

21 Mars



08:00



12:00



16:00



20:00


21 Juni




08:00



12:00

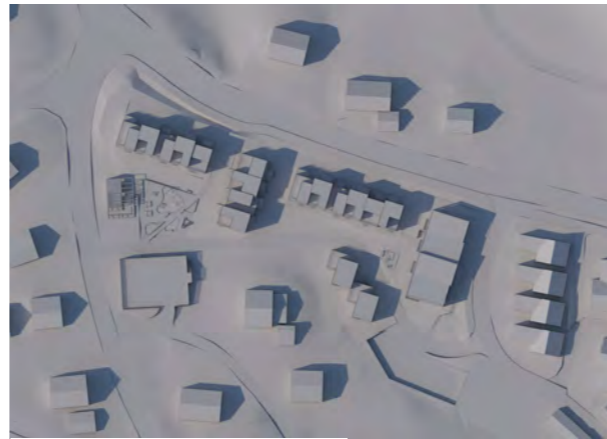


16:00

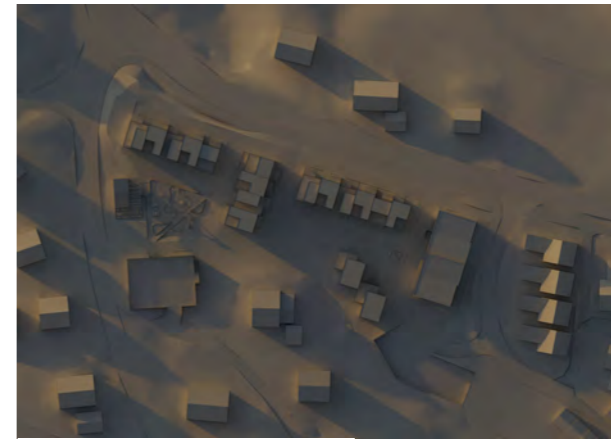


20:00


21 Desember

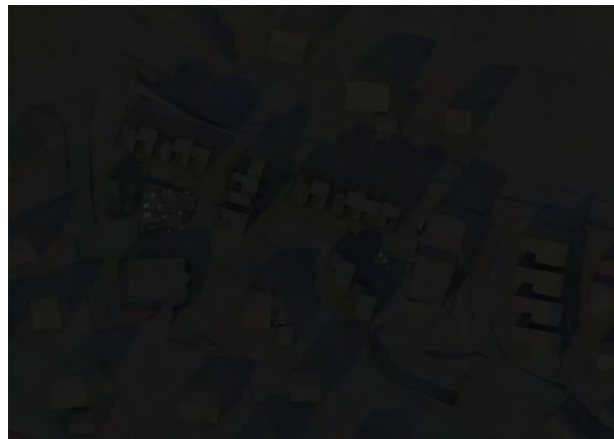


08:00

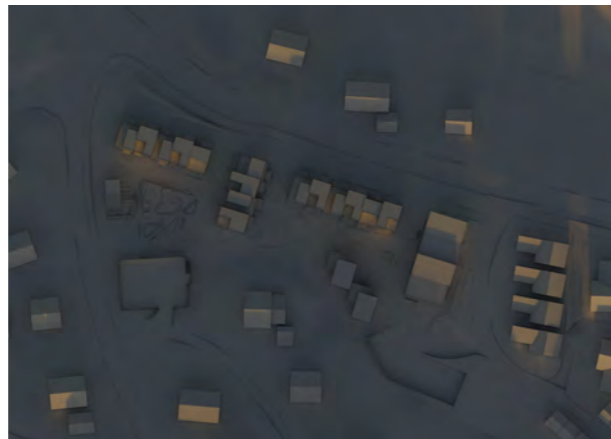

12:00

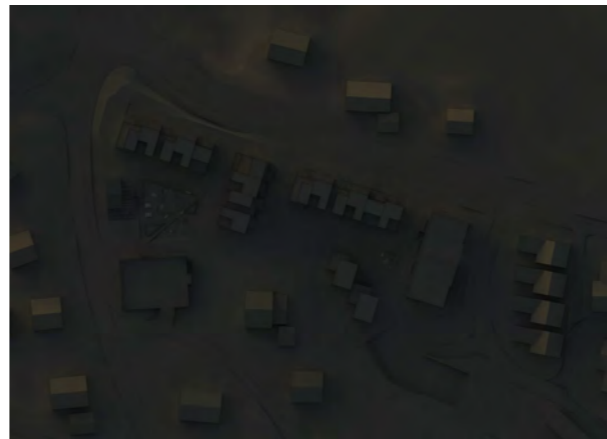

16:00

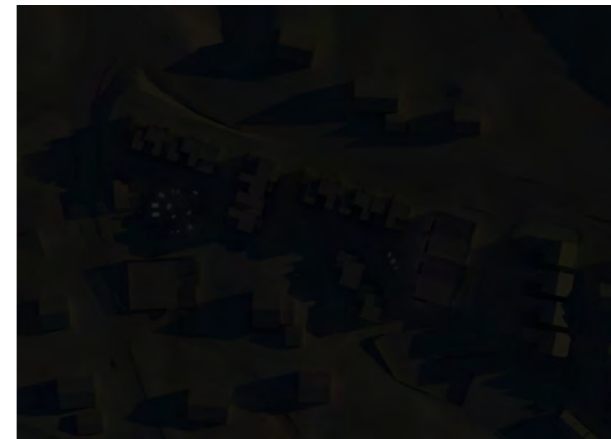

20:00

SK-13 Sol- og skyggediagram

29.03.19

NYE BOLIGER PÅ BALNES - DETALJREGULERING

Tiltakshaver: Fet kommune
Adresse: 1900 Fetsund
GNR/BNR.: 13/39 og del av 12/1

17018

VINDVEGGEN
Vindveggen arkitekter AS, Skredsmogata 7, 2000 Lillestrøm
Tlf: 63 80 51 00, vindveggen.no